



Sony VAIO PCG-F420 Floppy Drive Replacement

The floppy drive slides in and out for easy removal. This means no tools are required for its replacement.

Written By: Tim Cowley



INTRODUCTION

This guide will show how to remove the floppy drive for replacement.

Step 1 — Floppy Drive



- Locate the release tab on the bottom of the device.

Step 2



- Slide tab in the direction of the arrow and pull out the floppy drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 03:02:04 PM.

